# Full-size patterns

COUNTRY KNIFE TRAY · HALF PATTERNS

1. Print every sheet at 100 % (Actual size, not Fit to page).
2. Measure the square in the corner of each sheet. It must be exactly 1 inch.
   If it is not, the printer scaled the page. Fix the setting and print again.
3. Cut the pattern out on the line, or glue the sheet to card first and cut that.
4. Lay the pattern's bottom edge on the board's jointed edge, centre line on your centre mark.
5. Trace one half. Flip the pattern on the centre line, and trace the other half.
6. Saw 1/16 outside the line. Spokeshave and rasp to it.

The stations on each pattern are the same as on the plates, so you can check a tracing against the story stick. The dots are the heights; the ticks are the stations.

SHEET 2 Long side (A), make two.
SHEET 3 End (B), make two.
SHEET 4 Divider (C) and hand hole, make one.

The bottom (D) needs no pattern: 14 21/32 x 9 11/16 x 3/8, grain the long way.

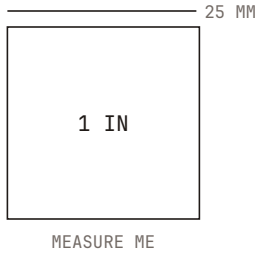

# Long side · A

HALF PATTERN · OUTSIDE FACE · MAKE TWO

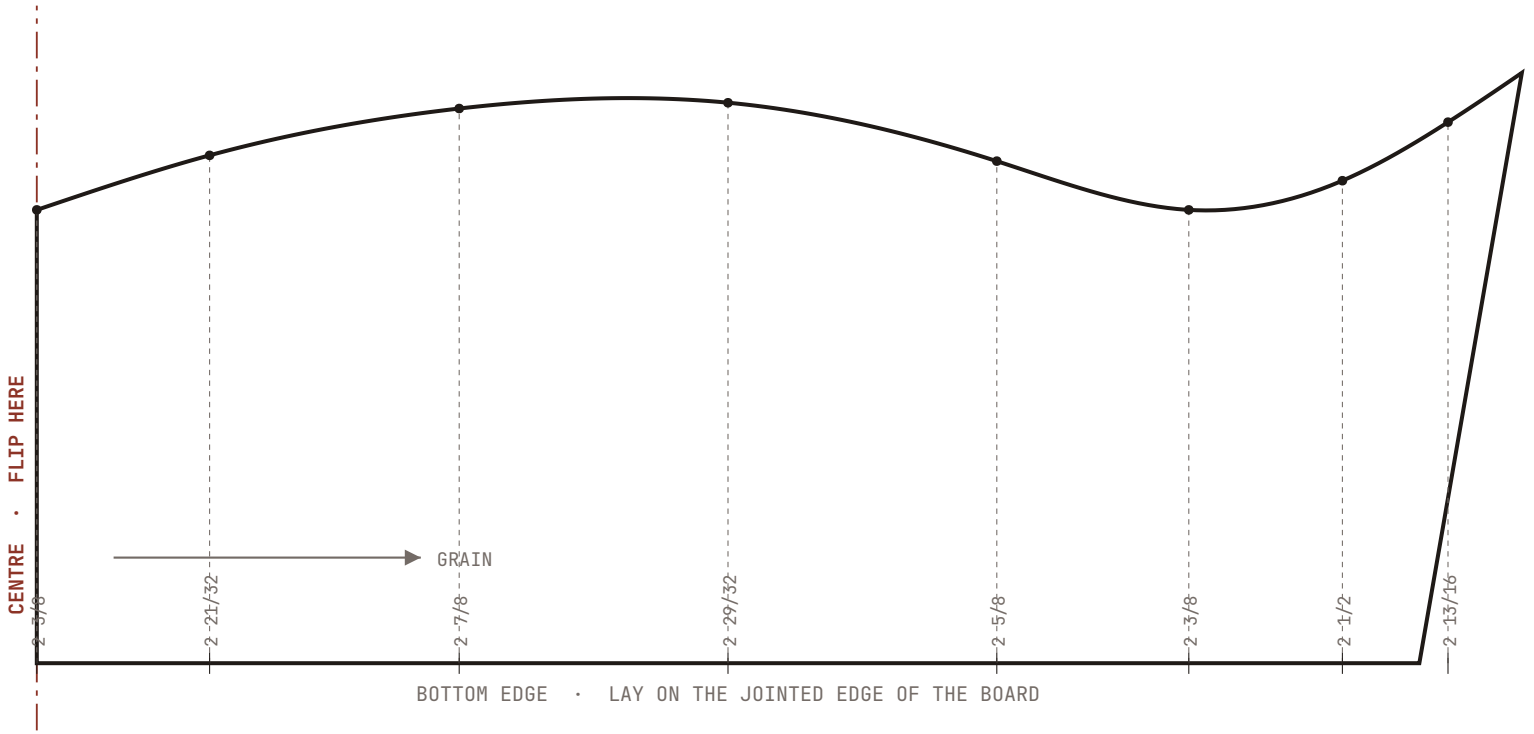


Bottom edge, whole board: 14 13/32. Tip to tip: 15 15/32.
Ends: 9.85° off square on the face (the pattern has it). Square through the thickness.
Bottom edge: rip a 10° bevel. The outside face is the short face.

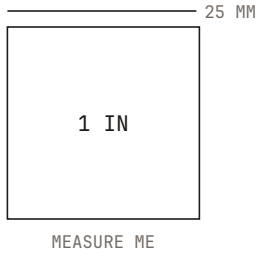

# End · B

HALF PATTERN · OUTSIDE FACE · MAKE TWO

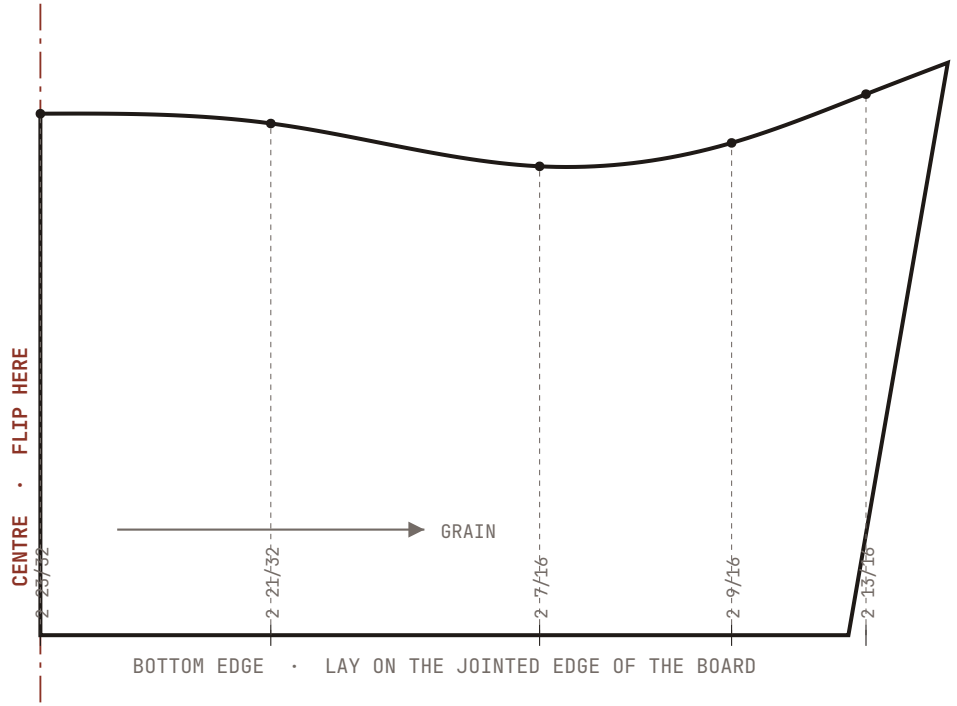


Bottom edge, whole board: 8 13/32. Fits between the long sides.
Ends: 9.85° off square on the face. Square through the thickness.
Bottom edge: rip a 10° bevel. The outside face is the short face.

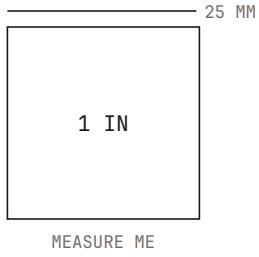

# Divider · C

HALF PATTERN · MAKE ONE · STANDS PLUMB

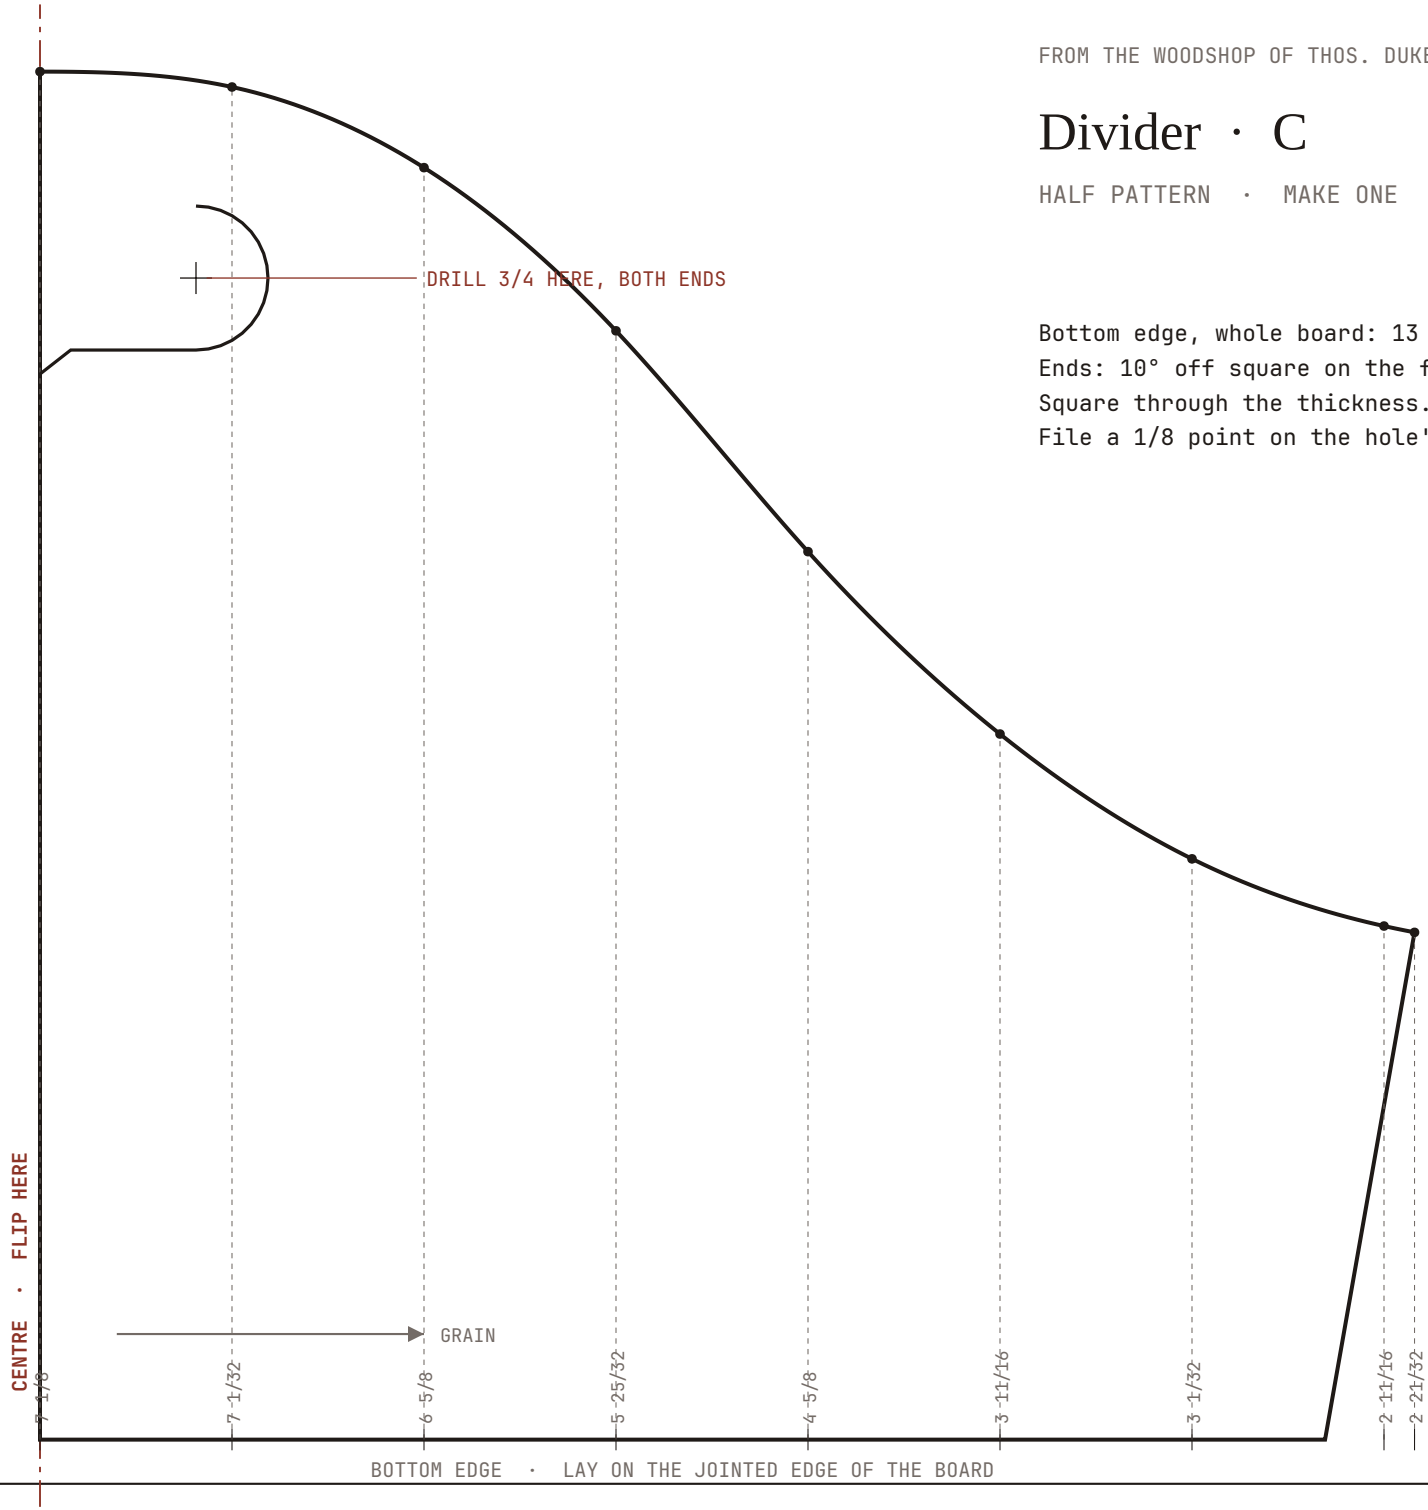


Bottom edge, whole board: 13 3/8.
Ends: 10° off square on the face.
Square through the thickness.
File a 1/8 point on the hole's lower edge.

